

Trusted. Tested. Tough®

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.

Register your Zoeller Pump Company Product on our website: <http://reg.zoellerpumps.com/>




Visit our website: www.zoellerpumps.com


REPLACEMENT PARTS LIST
FOR MODELS:

		AUTOMATIC	NONAUTOMATIC
115V	60Hz	WM88, M88	N88
220V	50Hz	WU88, U88	V88
220V	60Hz	WB88, BK88	BL88
230V	60Hz	WD88, D88	E88


Consult factory for all other models.

TO ORDER REPLACEMENT PARTS:
PLEASE FURNISH THE FOLLOWING INFORMATION:


- Model number
- Part number of pump
- Part number and description of part

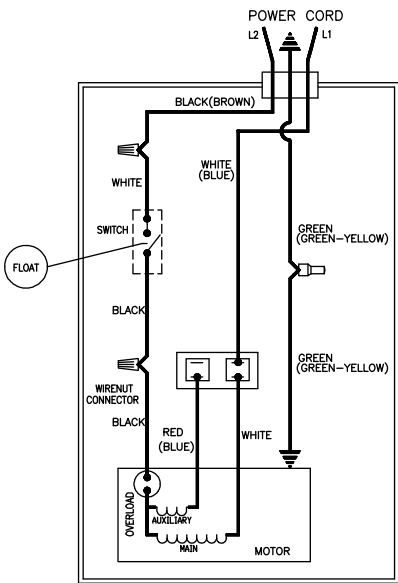

WIRING DIAGRAM FOR MODELS "WB88, WD88, WM88, WU88"

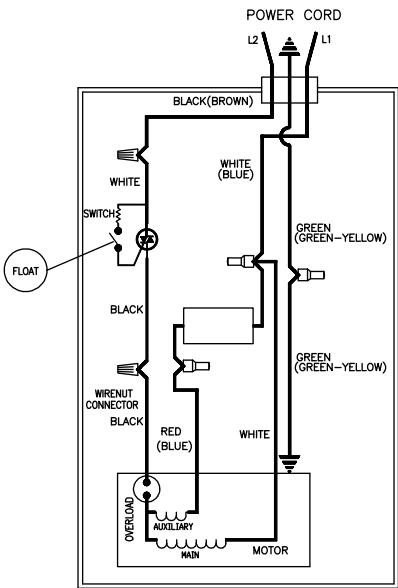

WIRING DIAGRAM FOR MODELS "D88, M88, U88, BK88"

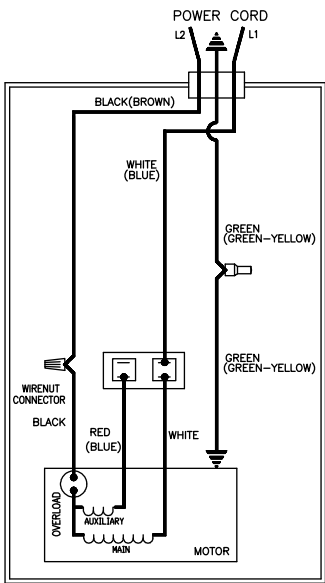

WIRING DIAGRAM FOR MODELS "E88, N88, V88, BL88"

REPLACEMENT PARTS LIST FOR MODELS WD88, WM88, WU88.


				MODELS:	WD88	WM88	WU88
REF NO.	DESCRIPTION	QTY	NOTES	88-0021, A	88-0005, A	88-0013, C 88-0032, A	
①	Screw, M5X15L	4		080880	080880	080880	
②	Power Cord Assy	1		N/A	N/A	N/A	
③	Float Set Assy	1		084355	084355	084355	
④	Seal, O-ring 19x2	2		080238	080238	080238	
⑤	Screw Assy	1		084360	084360	084360	
⑥	Screw, M6*1P*(15Lor16L)	4		080893	080893	080893	
⑦	Cap	1	2, 3, 4	080162	080162	080162	
⑧	Seal, O-ring	1		080160	080160	080160	
⑨	Capacitor Assy	1		084357	084359	086358	
⑩	Motor & Motor Housing	1		N/A	N/A	N/A	
⑪	Seal, lip NBR/4*11.2*24/Type B	1		080235	080235	080235	
⑫	Seal Assembly	1		084093	084093	084093	
⑬	Impeller	1		080738	080738	081893	
⑭	Pump Housing	1		083412	083412	083412	
⑮	Screw, M5X0.8PX15L	4		080894	080894	080894	
⑯	Pump Base	1		083415	083415	083415	
⑰	Screw, M4X15L	8		080879	080879	080879	

Note:

1. See chart for different type and length of cords available,
Consult factory or authorized distributor for any details.
2. When replacing this part,we advise to order an O-ring [Ⓐ] too.
3. When replacing this part,we advise to order an Screw Assy [Ⓒ] too.
4. When replacing this part,we advise to order an O-ring [Ⓓ] too.
- 5."N/A" indicates, not applicable.

Power Cord			
Length	Plug Spec	Part no.	Item no.
10'	NEMA 6-20 Plug	081710	88-0021, A
		084348	88-0005, A
	W/O Plug	084349	88-0032, A
15'	BS 1363A Plug	084350	88-0013, C

REPLACEMENT PARTS ILLUSTRATION FOR MODELS WD88, WM88, WU88.

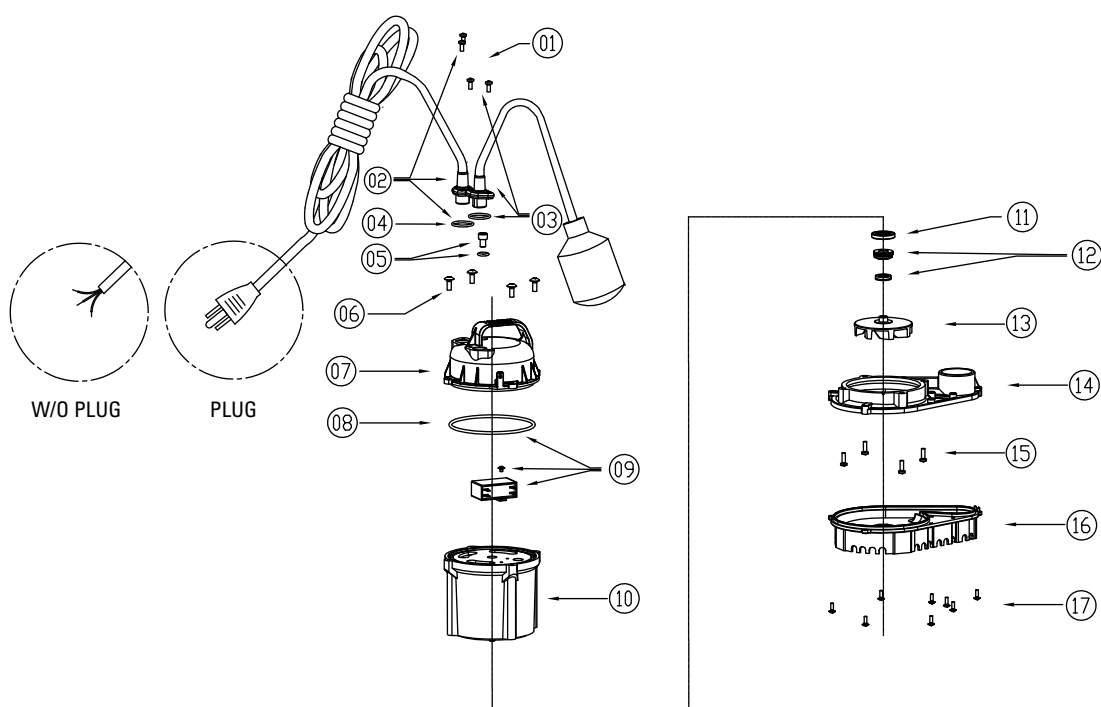

REPLACEMENT PARTS LIST FOR MODELS D88, M88, U88.


MODELS:				D88		M88	U88		
REF NO.	DESCRIPTION	QTY	NOTES	88-0020, A	88-0035, A	88-0006, C 88-0011, B	88-0014, D 88-0039, A	88-0018, B 88-0037, A	88-0040, A
01	Screw, M5X15L	2		080880	080880	080880	080880	080880	080880
02	Power Cord Assy	1		N/A	N/A	N/A	N/A	N/A	N/A
03	Screw, M4X15L	6		080879	080879	080879	080879	080879	080879
04	Cover, Wire box	1	2	080202	080202	080202	080202	080202	082981
05	Seal, Packing NBR	1		083115	083115	083115	083115	083115	083115
06	Circuit Board	1	2	081232	081232	080780	081232	081232	081232
07	Seal, O-ring 19x2	1		080238	080238	080238	080238	080238	080238
08	Screw Assy	1		084360	084360	084360	084360	084360	084360
09	Screw, M6*1P*(15Lor16L)	4		080893	080893	080893	080893	080893	080893
10	Cap	1	2, 3, 4, 5	080201	080201	080201	080201	080201	082982
11	Seal, O-ring	1		080160	080160	080160	080160	080160	080160
12	Capacitor Assy	1		084357	084357	084359	084358	084357	084357
13	Float Set, Vertical	1		084226	084226	084226	084226	084226	084226
14	Motor & Motor Housing	1		N/A	N/A	N/A	N/A	N/A	N/A
15	Seal, lip NBR/4*11.2*24/Type B	1		080235	080235	080235	080235	080235	080235
16	Seal Assembly	1		084093	084093	084093	084093	084093	084093
17	Impeller	1		080738	080738	080738	081893	081893	081893
18	Pump Housing	1		083413	082138	083413	083413	083413	083500
19	Screw, M5X0.8PX15L	4		080894	080894	080894	080894	080894	080894
20	Pump Base	1		083416	083416	083416	083416	083416	083501
21	Screw, M4X15L	8		080879	080879	080879	080879	080879	080879

Note:

1. See chart for different type and length of cords available.
Consult factory or authorized distributor for any details.
2. When replacing this part, we advise to order an O-ring 05 too.
3. When replacing this part, we advise to order an Screw Assy 07 too.
4. When replacing this part, we advise to order an O-ring 08 too.
5. When replacing this part, we advise to order an O-ring 11 too.
6. "N/A" indicates, not applicable.

Power Cord					
Length	Plug Spec	Part no.	Item no.		
10'	NEMA 5-15 Plug	084348	88-0006, C	88-0011, B	
	NEMA 6-15 Plug	081698	88-0020, A		
	GB1002-2008 Plug	084352	88-0018, B	88-0037, A	
	BS 1363A Plug	084350	88-0014, D	88-0018, B	88-0039, A
15'	AS3112	084353	88-0040, A		

REPLACEMENT PARTS ILLUSTRATION FOR MODELS D88, M88, U88.

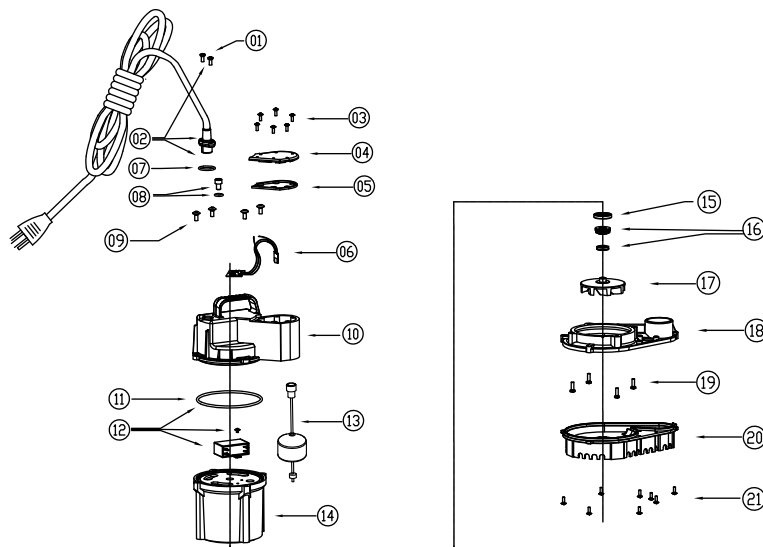

REPLACEMENT PARTS LIST FOR MODELS E88, N88, V88.


MODELS:				E88	N88	V88	
REF NO.	DESCRIPTION	QTY	NOTES	88-0010, B 88-0022, B	88-0007, B 88-0023, B	88-0012, B	88-0017, A
①	Screw, M5X15L	2		080880	080880	080880	080880
②	Power Cord Assy	1		N/A	N/A	N/A	N/A
③	Seal, O-ring 19x2	1		080238	080238	080238	080238
④	Screw Assy	1		084360	084360	084360	084360
⑤	Screw, M6*1P*(15Lor16L)	4		080893	080893	080893	080893
⑥	Cap	1	2, 3, 4	080729	080729	080729	080729
⑦	Seal, O-ring	1		080160	080160	080160	080160
⑧	Capacitor Assy	1		084357	084359	084358	084357
⑨	Motor & Motor Housing	1		N/A	N/A	N/A	N/A
⑩	Seal, lip NBR/4*11.2*24/Type B	1		080235	080235	080235	080235
⑪	Seal Assembly	1		084093	084093	084093	084093
⑫	Impeller	1		080738	080738	081893	081893
⑬	Pump Housing	1		083412	083412	083412	083412
⑭	Screw, M5X0.8PX15L	4		080894	080894	080894	080894
⑮	Pump Base	1		083415	083415	083415	083412
⑯	Screw, M4X15L	8		080879	080879	080879	080879

Note:

1. See chart for different type and length of cords available.
Consult factory or authorized distributor for any details.
2. When replacing this part, we advise to order an O-ring 03 too.
3. When replacing this part, we advise to order an Screw Assy 04 too.
4. When replacing this part, we advise to order an O-ring 07 too.
5. "N/A" indicates, not applicable.

Power Cord				
Length	Plug Spec	Part no.	Item no.	
10'	NEMA 5-15 Plug	084348	88-0007, B	88-0023, B
	W/O Plug	084349	88-0010, B	
	NEMA 6-15 Plug	084347	88-0022, B	
	GB1002-2008	084352	88-0017 B	
15'	BS 1363A	084350	88-0012, B	

REPLACEMENT PARTS ILLUSTRATION FOR MODELS E88, N88, V88.

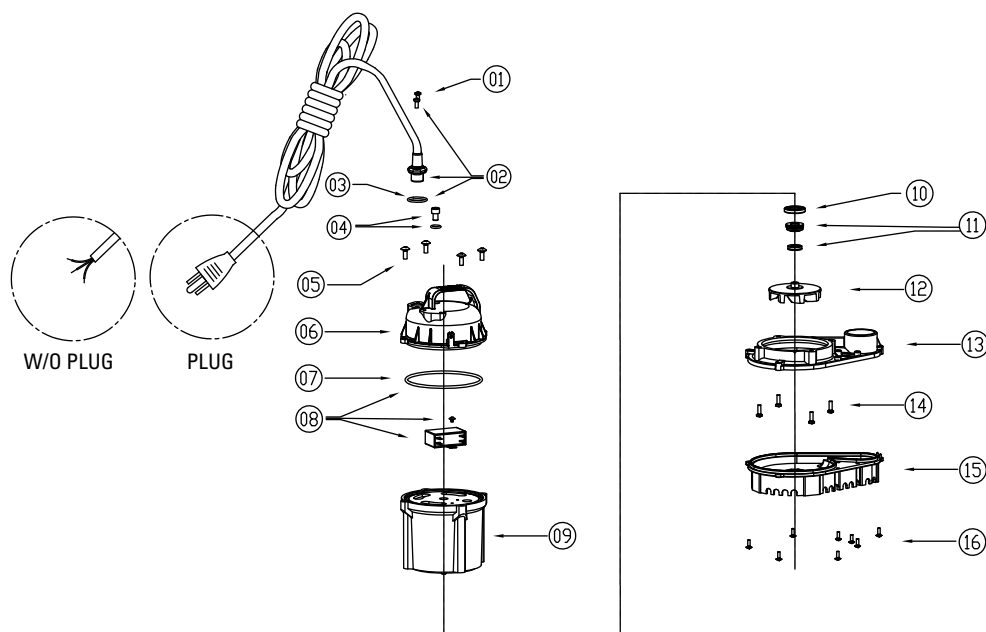

REPLACEMENT PARTS LIST FOR MODELS WB88, WU88.


REF NO.	DESCRIPTION	QTY	NOTES	MODELS:	WB88	WU88
					88-0027, A	88-0024, A
01	Screw, M5X15L	2			080880	080880
02	Power Cord Assy	1			N/A	N/A
03	Float Set Assy	1			084356	084355
04	Seal, O-ring 19x2	1			080238	080238
05	Screw Assy	1			084360	084360
06	Screw, M6*1P*(15Lor16L)	4			080893	080893
07	Cap	1	2, 3, 4		080162	080162
08	Seal, O-ring	1			080160	080160
09	Capacitor Assy	1			084357	084357
10	Motor & Motor Housing	1			N/A	N/A
11	Seal, lip NBR/4*11.2*24/Type B	1			080235	080235
12	Seal Assembly	1			084093	084093
13	Impeller	1			080738	081893
14	Pump Housing	1			082603	081070
15	Screw, M5X0.8PX15L	4			080894	080894
16	Screw, M12X1.75PX12L	4			080302	080302

Note:

1. See chart for different type and length of cords available.
Consult factory or authorized distributor for any details.
2. When replacing this part, we advise to order an O-ring 04 too.
3. When replacing this part, we advise to order an Screw Assy 05 too.
4. When replacing this part, we advise to order an O-ring 08 too.
5. "N/A" indicates, not applicable.

Power Cord			
Length	Plug Spec	Part no.	Item no.
10'	CEE 7-VII	084351	88-0027, A
	W/O Plug	084349	88-0024, A

REPLACEMENT PARTS ILLUSTRATION FOR MODELS WB88, WU88.

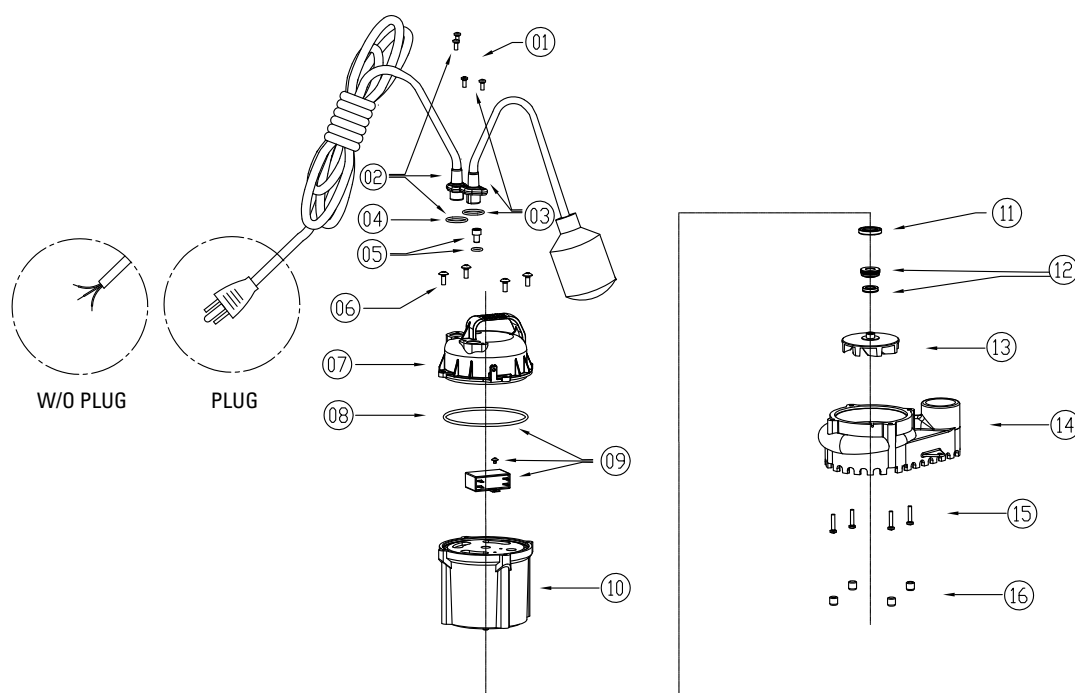

REPLACEMENT PARTS LIST FOR MODELS D88, U88, BK88.


MODELS:				D88			U88			BK88
REF NO.	DESCRIPTION	QTY	NOTES	88-0031, D	88-0035, D	88-0038, D	88-0026, D	88-0034, A	88-0041, A	88-0028, A
01	Screw, M5X15L	2		080880	080880	080880	080880	080880	080880	080880
02	Power Cord Assy	1		N/A	N/A	N/A	N/A	N/A	N/A	N/A
03	Screw, M4X15L	6		080879	080879	080879	080879	080879	080879	080879
04	Cover, Wire box	1	2	080202	080202	080202	080202	080202	080202	080202
05	Seal, Packing NBR	1		083115	083115	083115	083115	083115	083115	083115
06	Circuit Board	1	2	081232	081232	081232	081232	081232	081232	081232
07	Seal, O-ring 19x2	1		080238	080238	080238	080238	080238	080238	080238
08	Screw Assy	1		084360	084360	084360	084360	084360	084360	084360
09	Screw, M6*1P*(15Lor16L)	4		080893	080893	080893	080893	080893	080893	080893
10	Cap	1	2, 3, 4, 5	080201	080201	080201	080201	080201	080201	080201
11	Seal, O-ring	1		080160	080160	080160	080160	080160	080160	080160
12	Capacitor Assy	1		084357	084357	084357	084357	084357	084357	084357
13	Float Set, Vertical	1		084226	084226	084226	084226	084226	084226	084226
14	Motor & Motor Housing	1		N/A	N/A	N/A	N/A	N/A	N/A	N/A
15	Seal, lip NBR/4*11.2*24/Type B	1		080235	080235	080235	080235	080235	080235	080235
16	Seal Assembly	1		084093	084093	084093	084093	084093	084093	084093
17	Impeller	1		080738	080738	080738	081893	081903	081893	080738
18	Pump Housing	1		081069	082138	081069	081069	082138	082136	082606
19	Screw, M5X0.8PX15L	4		080894	080894	080894	080894	080894	080894	080894
20	Screw, M12X1.75PX12L	4		080302	080302	080302	080302	080302	080302	080302

Note:

1. See chart for different type and length of cords available.
Consult factory or authorized distributor for any details.
2. When replacing this part, we advise to order an O-ring 05 too.
3. When replacing this part, we advise to order an Screw Assy 07 too.
4. When replacing this part, we advise to order an O-ring 08 too.
5. When replacing this part, we advise to order an O-ring 11 too.
6. "N/A" indicates, not applicable.

Power Cord					
Length	Plug Spec	Part no.	Item no.		
10'	W/O Plug	084349	88-0026, A	88-0031, A	88-0034, A
	NEMA 5-15 Plug	084354	88-0038, A		
	CEE 7-VII	084351	88-0028, A		
	NEMA 6-20 Plug	084347	88-0035 A		
	GB1002-2008 PLUG	084352	88-0041, A		

REPLACEMENT PARTS ILLUSTRATION FOR MODELS D88, U88, BK88.

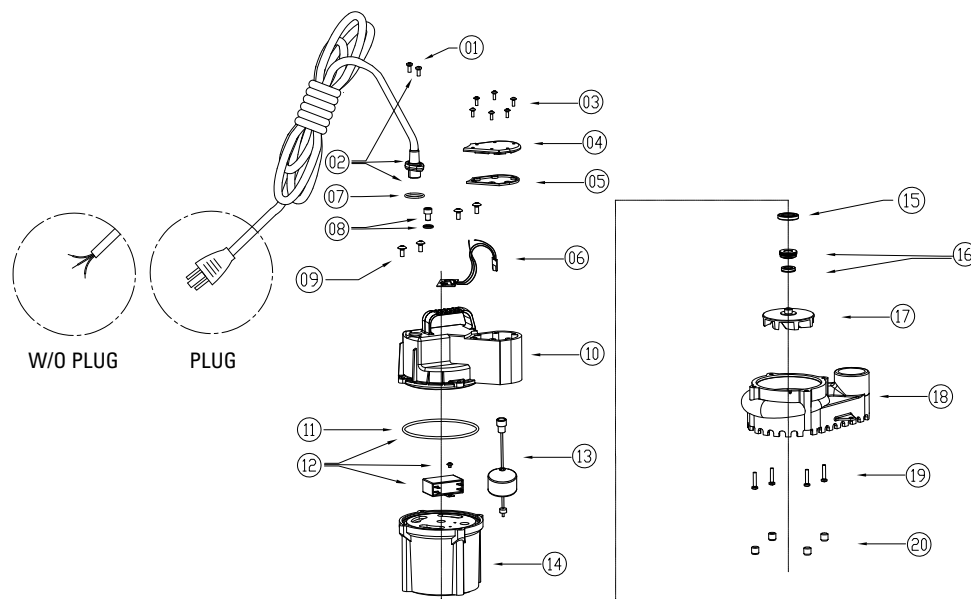

REPLACEMENT PARTS LIST FOR MODELS E88, V88, BL88.


REF NO.	DESCRIPTION	QTY	NOTES	MODELS:	E88	V88	BL88
					88-0009, B	88-0025, A	88-0033, A
01	Screw, M5X15L	2			080880	080880	080880
02	Power Cord Assy	1			N/A	N/A	N/A
03	Screw, O-ring 19x2	1			080238	080238	080238
04	Screw Assy	1			084360	084360	084360
05	Screw, M6*1P*(15Lor16L)	4			080893	080893	080893
06	Cap	1	2, 3, 4		080729	080729	080729
07	Seal, O-ring	1			080160	080160	080160
08	Capacitor Assy	1			084357	084357	084357
09	Motor & Motor Housing	1			N/A	N/A	N/A
10	Seal, lip NBR/4*11.2*24/Type B	1			080235	080235	080235
11	Seal Assembly	1			084093	084093	084093
12	Impeller	1			080738	081893	080738
13	Pump Housing	1			082871	081070	082137
14	Screw, M5X0.8PX15L	4			080894	080894	080894
15	Screw, M12X1.75PX12L	4			080302	080302	080302

Note:

1. See chart for different type and length of cords available.
Consult factory or authorized distributor for any details.
2. When replacing this part, we advise to order an O-ring 03 too.
3. When replacing this part, we advise to order an Screw Assy 04 too.
4. When replacing this part, we advise to order an O-ring 07 too.
5. "N/A" indicates, not applicable.

Power Cord					
Length	Plug Spec	Part no.	Item no.		
10'	W/O Plug	084349	88-0009, A	88-0025, A	88-0033, A
	CEE 7-VII	084351	88-0029, A		

REPLACEMENT PARTS ILLUSTRATION FOR MODELS E88, V88, BL88.

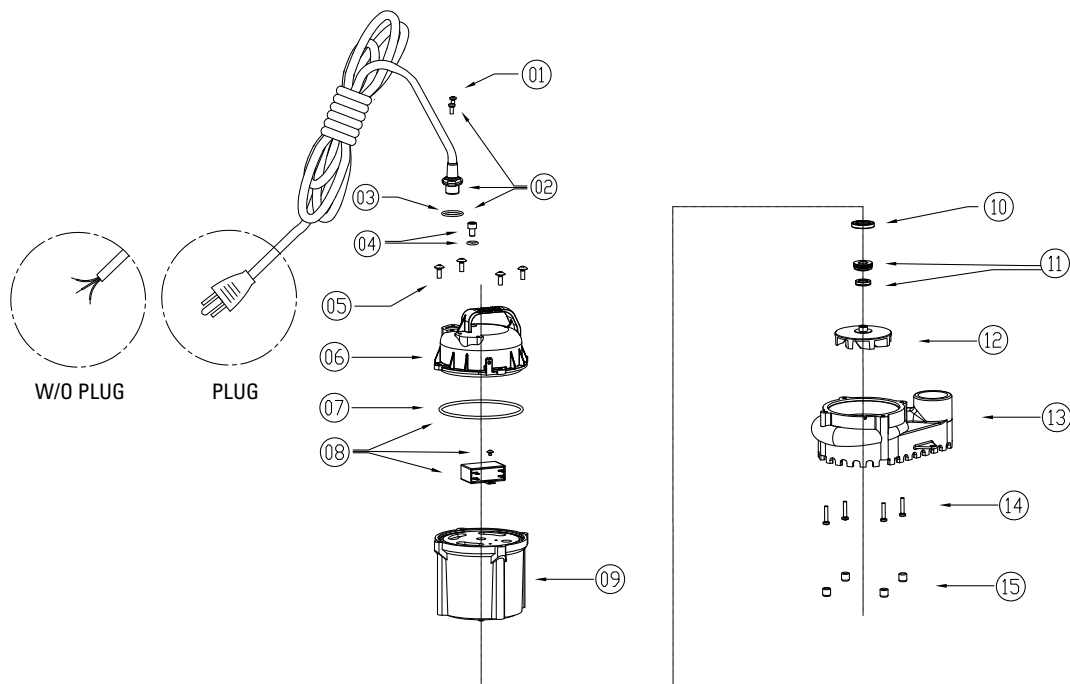

安裝前務必詳讀說明書

Trusted. Tested. Tough.®

文件僅供參考
若有任何修改
恕不另行通知

請至美國卓勒泵浦公司
官網完成您的產品註冊



Visit our website:
www.zoellerpumps.com


以下型號使用的更換零件清單：

		自 動	非 自 動
115V	60Hz	WM88, M88	N88
220V	50Hz	WU88, U88	V88
220V	60Hz	WB88, BK88	BL88
230V	60Hz	WD88, D88	E88


其他的所有型號請洽詢工廠

如欲訂購更換零件，請提供以下資訊：


- 型號
- 泵浦的零件編號
- 零件編號及零件說明

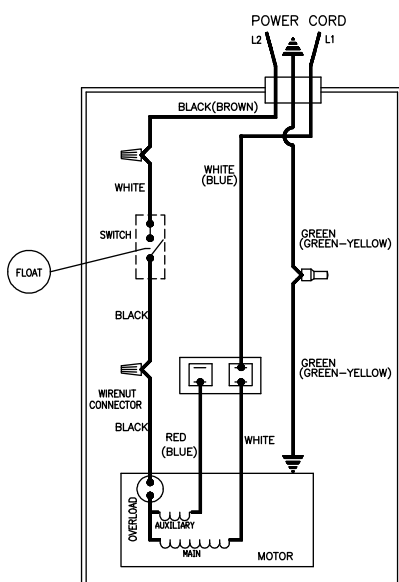

以下型號的配線圖
"WB88, WD88, WM88, WU88"

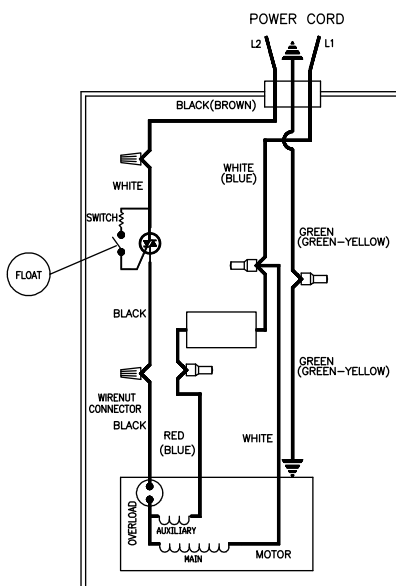

以下型號的配線圖
"D88, M88, U88, BK88"

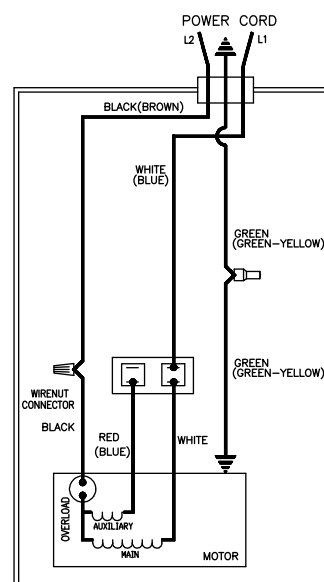

以下型號的配線圖
"E88, N88, V88, BL88"

型號 WD88, WM88, WU88 的更換零件清單


型號:				WD88	WM88	WU88
參考序號	說明	數量	備註	88-0021, A	88-0005, A	88-0013, C 88-0032, A
①	螺絲, M5X15L	4		080880	080880	080880
②	電源線	1		N/A	N/A	N/A
③	浮球組件	1		084355	084355	084355
④	密封件, O 型環 19x2	2		080238	080238	080238
⑤	螺絲組件	1		084360	084360	084360
⑥	螺絲, M6*1P*(15L或16L)	4		080893	080893	080893
⑦	上蓋	1	2, 3, 4	080162	080162	080162
⑧	密封, O 型環	1		080160	080160	080160
⑨	電容器組件	1		084357	084359	086358
⑩	馬達 & 馬達外殼	1		N/A	N/A	N/A
⑪	密封, 油封 NBR/4*11.2*24/型式 B	1		080235	080235	080235
⑫	密封組件	1		084093	084093	084093
⑬	葉輪	1		080738	080738	081893
⑭	泵浦外殼	1		083412	083412	083412
⑮	螺絲, M5X0.8PX15L	4		080894	080894	080894
⑯	泵浦底座	1		083415	083415	083415
⑰	螺絲, M4X15L	8		080879	080879	080879

備註

- 請參閱不同型式及可用電源線長度的圖表。有關細節，請洽詢工廠或授權經銷商。
- 更換此零件時，我們建議也訂購一個 O型環 ④
- 更換此零件時，我們建議也訂購一個 螺絲組件 ⑤
- 更換此零件時，我們建議也訂購一個 O型環 ⑧
- “N/A” 表示不適用

電源線			
長度	插頭規格	零件編號	項目編號
10'	NEMA 6-20 插頭	081710	88-0021, A
		084348	88-0005, A
	無插頭	084349	88-0032, A
15'	BS 1363A 插頭	084350	88-0013, C

型號 WD88, WM88, WU88 的更換零件圖解

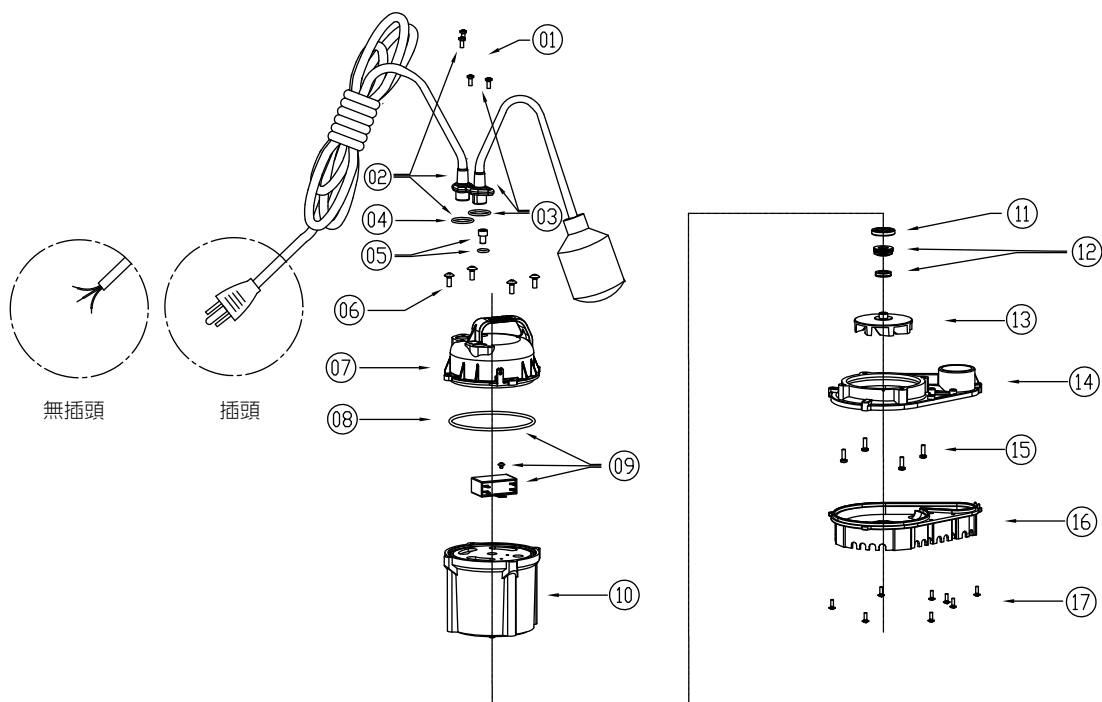

型號 D88, M88, U88 的更換零件清單


參考 序號	說明	數量	型號：	D88		M88	U88		
				88-0020, A	88-0035, A	88-0006, C 88-0011, B	88-0014, D 88-0039, A	88-0018, B 88-0037, A	88-0040, A
01	螺絲, M5X15L	2		080880	080880	080880	080880	080880	080880
02	電源線	1		N/A	N/A	N/A	N/A	N/A	N/A
03	螺絲, M4X15L	6		080879	080879	080879	080879	080879	080879
04	護蓋, 電線盒	1	2	080202	080202	080202	080202	080202	082981
05	密封, 墊片 NBR	1		083115	083115	083115	083115	083115	083115
06	電路板	1	2	081232	081232	080780	081232	081232	081232
07	密封, O 型環 19x2	1		080238	080238	080238	080238	080238	080238
08	螺絲組件	1		084360	084360	084360	084360	084360	084360
09	螺絲, M6*1P*(15Lor16L)	4		080893	080893	080893	080893	080893	080893
10	上蓋	1	2, 3, 4, 5	080201	080201	080201	080201	080201	082982
11	密封, O 型環	1		080160	080160	080160	080160	080160	080160
12	電容器組件	1		084357	084357	084359	084358	084357	084357
13	浮球組, 垂直	1		084226	084226	084226	084226	084226	084226
14	馬達 & 馬達外殼	1		N/A	N/A	N/A	N/A	N/A	N/A
15	密封, 油封 NBR/4*11.2*24/型式 B	1		080235	080235	080235	080235	080235	080235
16	密封組件	1		084093	084093	084093	084093	084093	084093
17	葉輪	1		080738	080738	080738	081893	081893	081893
18	泵浦外殼	1		083413	082138	083413	083413	083413	083500
19	螺絲, M5X0.8PX15L	4		080894	080894	080894	080894	080894	080894
20	泵浦底座	1		083416	083416	083416	083416	083416	083501
21	螺絲, M4X15L	8		080879	080879	080879	080879	080879	080879

備註

1. 請參閱不同型式及可用電源線長度的圖表。有關細節，請洽詢工廠或授權經銷商。
2. 更換此零件時，我們建議也訂購一個 O型環 05
3. 更換此零件時，我們建議也訂購一個 螺絲組件 07
4. 更換此零件時，我們建議也訂購一個 O型環 08
5. 更換此零件時，我們建議也訂購一個 O型環 11
6. “N/A” 表示不適用

電源線					
長度	插頭規格	零件編號	項目編號		
10'	NEMA 5-15 插頭	084348	88-0006, C	88-0011, B	
	NEMA 6-15 插頭	081689	88-0020, A		
	GB1002-2008 插頭	084352	88-0018, B	88-0037, A	
	BS 1363A 插頭	084350	88-0014, D	88-0018, B	88-0039, A
15'	AS3112	084353	88-0040, A		

型號 D88, M88, U88 的更換零件圖解

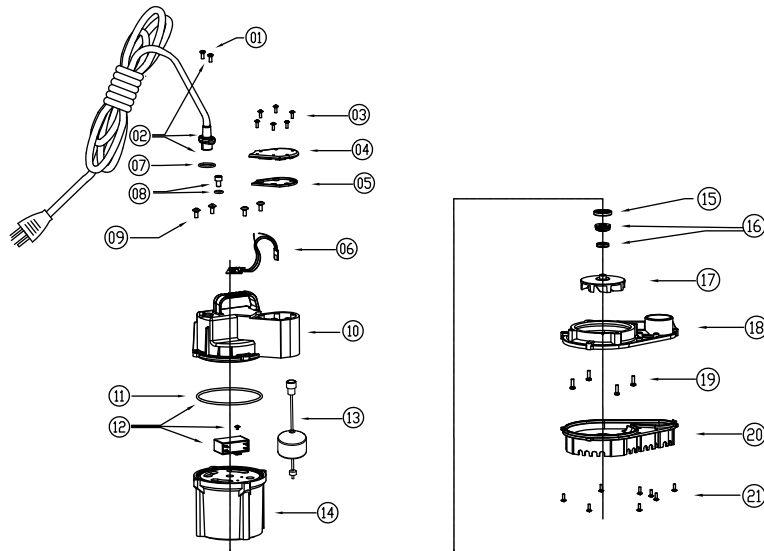

型號 E88, N88, V88 的更換零件清單


			型號:	E88	N88	V88	
參考 序號	說明	數量	備註	88-0010, B 88-0022, B	88-0007, B 88-0023, B	88-0012, B	88-0017, A
01	螺絲, M5X15L	2		080880	080880	080880	080880
02	電源線	1		N/A	N/A	N/A	N/A
03	密封, O 型環 19x2	1		080238	080238	080238	080238
04	螺絲組件	1		084360	084360	084360	084360
05	螺絲, M6*1P*(15Lor16L)	4		080893	080893	080893	080893
06	上蓋	1	2, 3, 4	080729	080729	080729	080729
07	密封, O 型環	1		080160	080160	080160	080160
08	電容器組件	1		084357	084359	084358	084357
09	馬達 & 馬達外殼	1		N/A	N/A	N/A	N/A
10	密封, 油封 NBR/4*11.2*24/型式 B	1		080235	080235	080235	080235
11	密封組件	1		084093	084093	084093	084093
12	葉輪	1		080738	080738	081893	081893
13	泵浦外殼	1		083412	083412	083412	083412
14	螺絲, M5X0.8PX15L	4		080894	080894	080894	080894
15	泵浦底座	1		083415	083415	083415	083412
16	螺絲, M4X15L	8		080879	080879	080879	080879

備註

1. 請參閱不同型式及可用電源線長度的圖表。有關細節，請洽詢工廠或授權經銷商。
2. 更換此零件時，我們建議也訂購一個 O型環 03
3. 更換此零件時，我們建議也訂購一個 螺絲組件 04
4. 更換此零件時，我們建議也訂購一個 O型環 07
5. “N/A” 表示不適用

電源線				
長度	插頭規格	零件編號	項目編號	
10'	NEMA 5-15 插頭	084348	88-0007, B	88-0023, B
	無插頭	084349	88-0010, B	
	NEMA 6-15 插頭	084347	88-0022, B	
	GB1002-2008	084352	88-0017 B	
15'	BS 1363A	084350	88-0012, B	

型號 E88, N88, V88 的更換零件圖解

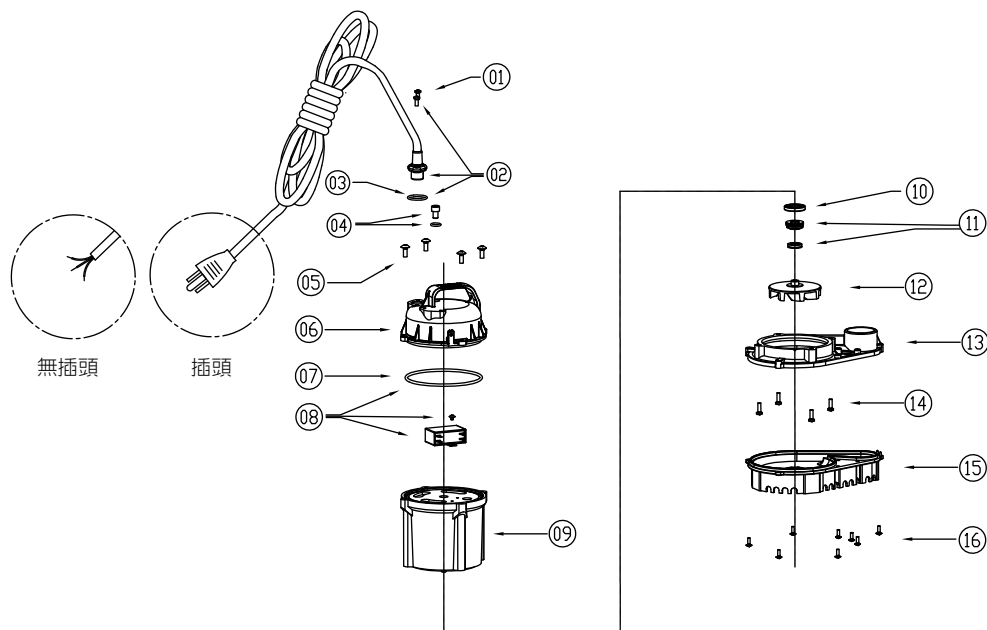

型號 WB88, WU88 的更換零件清單


			型號:	WB88	WU88
參考序號	說明	數量	備註	88-0027, A	88-0024, A
01	螺絲, M5X15L	2		080880	080880
02	電源線	1		N/A	N/A
03	浮球組件	1		084356	084355
04	密封, O 型環 19x2	1		080238	080238
05	螺絲組件	1		084360	084360
06	螺絲, M6*1P*(15Lor16L)	4		080893	080893
07	上蓋	1	2, 3, 4	080162	080162
08	密封, O 型環	1		080160	080160
09	電容器組件	1		084357	084357
10	馬達 & 馬達外殼	1		N/A	N/A
11	密封, 油封 NBR/4*11.2*24/型式 B	1		080235	080235
12	密封組件	1		084093	084093
13	葉輪	1		080738	081893
14	泵浦外殼	1		082603	081070
15	螺絲, M5X0.8PX15L	4		080894	080894
16	螺絲, M12X1.75PX12L	4		080302	080302

備註

- 請參閱不同型式及可用電源線長度的圖表。有關細節，請洽詢工廠或授權經銷商。
- 更換此零件時，我們建議也訂購一個 O型環 04
- 更換此零件時，我們建議也訂購一個 螺絲組件 05
- 更換此零件時，我們建議也訂購一個 O型環 08
- “N/A” 表示不適用

電源線			
長度	插頭規格	零件編號	項目編號
10'	CEE 7-VII	084351	88-0027, A
	無插頭	084349	88-0024, A

型號 WB88, WU88 的更換零件圖解

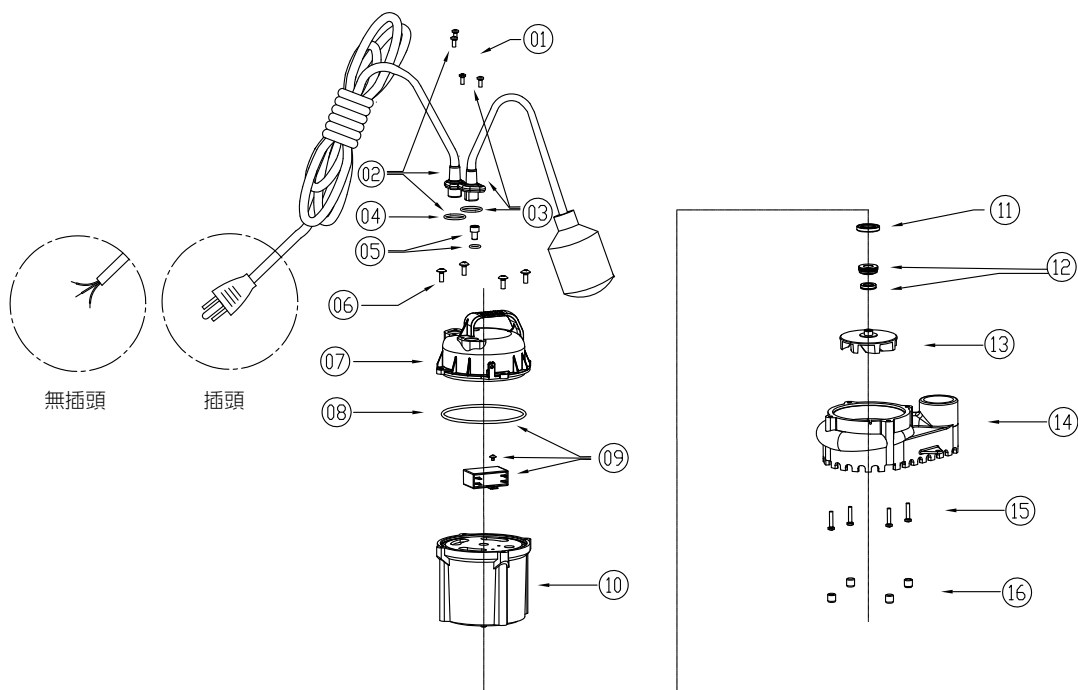

型號 D88, U88, BK88 的更換零件清單


型號:				D88			U88			BK88
參考序號	說明	數量	備註	88-0031, D	88-0035, D	88-0038, D	88-0026, D	88-0034, A	88-0041, A	88-0028, A
01	螺絲, M5X15L	2		080880	080880	080880	080880	080880	080880	080880
02	電源線	1		N/A	N/A	N/A	N/A	N/A	N/A	N/A
03	螺絲, M4X15L	6		080879	080879	080879	080879	080879	080879	080879
04	護蓋, 電線盒	1	2	080202	080202	080202	080202	080202	080202	080202
05	密封, 墊片 NBR	1		083115	083115	083115	083115	083115	083115	083115
06	電路板	1	2	081232	081232	081232	081232	081232	081232	081232
07	密封, O 型環 19x2	1		080238	080238	080238	080238	080238	080238	080238
08	螺絲組件	1		084360	084360	084360	084360	084360	084360	084360
09	螺絲, M6*1P*(15Lor16L)	4		080893	080893	080893	080893	080893	080893	080893
10	上蓋	1	2, 3, 4, 5	080201	080201	080201	080201	080201	080201	080201
11	密封, O 型環	1		080160	080160	080160	080160	080160	080160	080160
12	電容器組件	1		084357	084357	084357	084357	084357	084357	084357
13	浮球組, 垂直	1		084226	084226	084226	084226	084226	084226	084226
14	馬達 & 馬達外殼	1		N/A	N/A	N/A	N/A	N/A	N/A	N/A
15	密封, 油封 NBR/4*11.2*24/型式 B	1		080235	080235	080235	080235	080235	080235	080235
16	密封組件	1		084093	084093	084093	084093	084093	084093	084093
17	葉輪	1		080738	080738	080738	081893	081903	081893	080738
18	泵浦外殼	1		081069	082138	081069	081069	082138	082136	082606
19	螺絲, M5X0.8PX15L	4		080894	080894	080894	080894	080894	080894	080894
20	螺絲, M12X1.75PX12L	4		080302	080302	080302	080302	080302	080302	080302

備註

- 請參閱不同型式及可用電源線長度的圖表。有關細節，請洽詢工廠或授權經銷商。
- 更換此零件時，我們建議也訂購一個 O型環 05
- 更換此零件時，我們建議也訂購一個 螺絲組件 07
- 更換此零件時，我們建議也訂購一個 O型環 08
- 更換此零件時，我們建議也訂購一個 O型環 11
- “N/A” 表示不適用

電源線					
長度	插頭規格	零件編號	項目編號		
10'	無插頭	084349	88-0026, A	88-0031, A	88-0034, A
	NEMA 5-15 插頭	084354	88-0038, A		
	CEE 7-VII	084351	88-0028, A		
	NEMA 6-20 插頭	084347	88-0035 A		
	GB1002-2008 插頭	084352	88-0041, A		

型號 D88, U88, BK88 的更換零件圖解

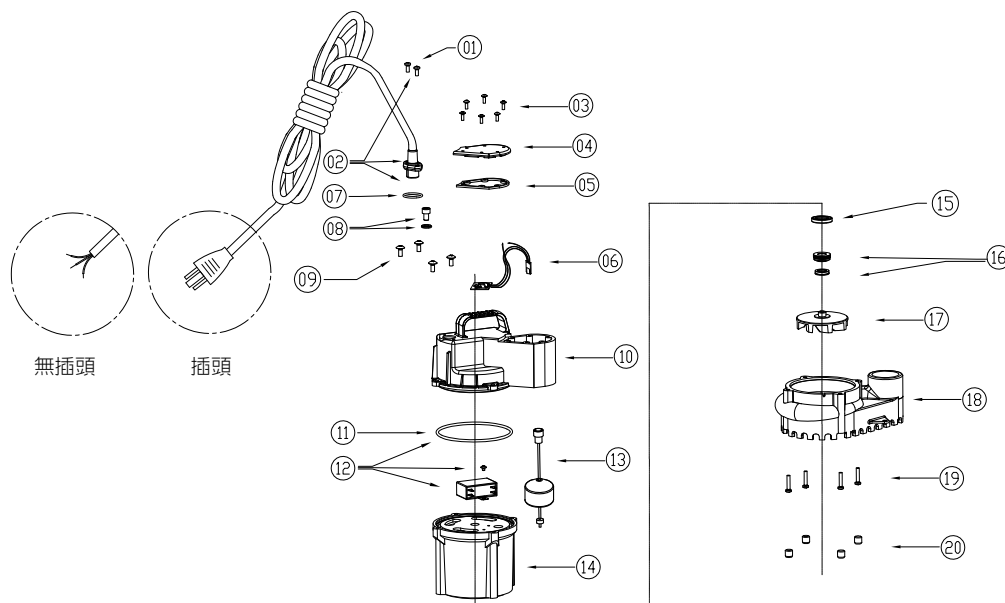

型號 E88, V88, BL88 的更換零件清單


參考 序號	說明	數量	備註	型號:	E88	V88		BL88
					88-0009, B	88-0025, A	88-0033, A	88-0029, A
01	螺絲, M5X15L	2			080880	080880	080880	080880
02	電源線	1			N/A	N/A	N/A	N/A
03	密封, O 型環 19x2	1			080238	080238	080238	080238
04	螺絲組件	1			084360	084360	084360	084360
05	螺絲, M6*1P*(15Lor16L)	4			080893	080893	080893	080893
06	上蓋	1	2, 3, 4		080729	080729	080729	080729
07	密封, O 型環	1			080160	080160	080160	080160
08	電容器組件	1			084357	084357	084357	084357
09	馬達 & 馬達外殼	1			N/A	N/A	N/A	N/A
10	密封, 油封 NBR/4*11.2*24/型式 B	1			080235	080235	080235	080235
11	密封組件	1			084093	084093	084093	084093
12	葉輪	1			080738	081893	081893	080738
13	泵浦外殼	1			082871	081070	082137	082603
14	螺絲, M5X0.8PX15L	4			080894	080894	080894	080894
15	螺絲, M12X1.75PX12L	4			080302	080302	080302	080302

備註

- 請參閱不同型式及可用電源線長度的圖表。有關細節，請洽詢工廠或授權經銷商。
- 更換此零件時，我們建議也訂購一個 O型環 03
- 更換此零件時，我們建議也訂購一個 螺絲組件 04
- 更換此零件時，我們建議也訂購一個 O型環 07
- “N/A” 表示不適用

電源線					
長度	插頭規格	零件編號	項目編號		
10'	無插頭	084349	88-0009, A	88-0025, A	88-0033, A
	CEE 7-VII	084351	88-0029, A		

型號 E88, V88, BL88 的更換零件圖解

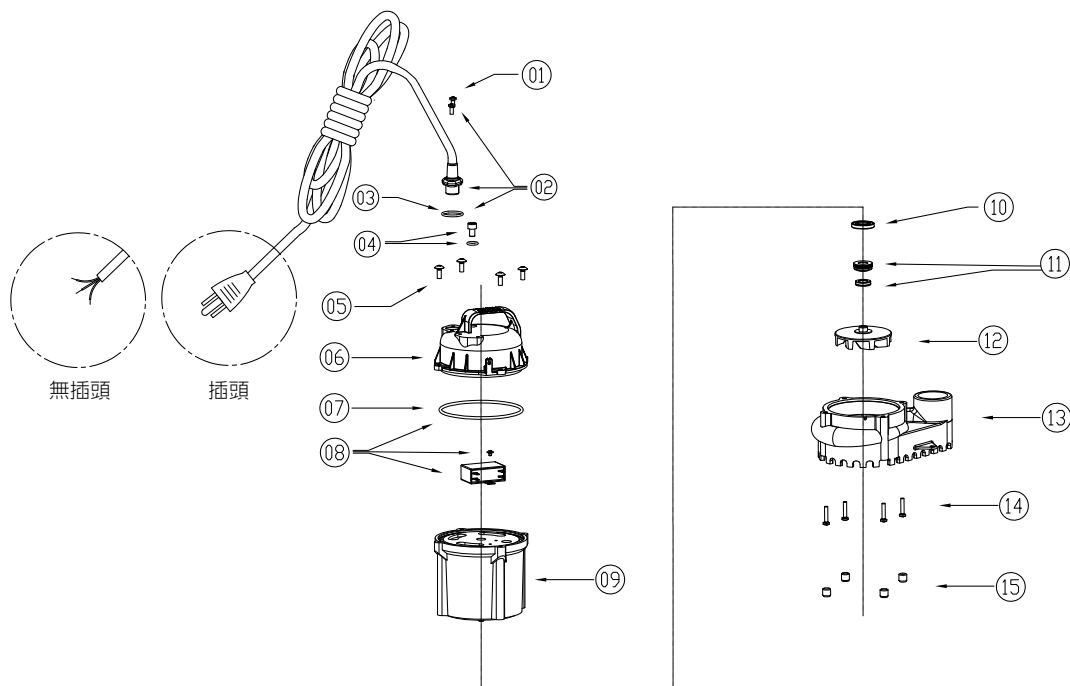

安装前务必详读说明书

Trusted. Tested. Tough®

文件仅供参考
若有任何修改
恕不另行通知

请至美国卓勒水泵公司
官网完成您的产品注册



Visit our website:
www.zoellerpumps.com


以下型号使用的更换零件清单：

	自动	非自动
115V 60Hz	WM88, M88	N88
220V 50Hz	WU88, U88	V88
220V 60Hz	WB88, BK88	BL88
230V 60Hz	WD88, D88	E88


其他的所有型号请咨询工厂

如欲订购更换零件，请提供以下资讯：


- 型号
- 水泵的零件编号
- 零件编号及零件说明

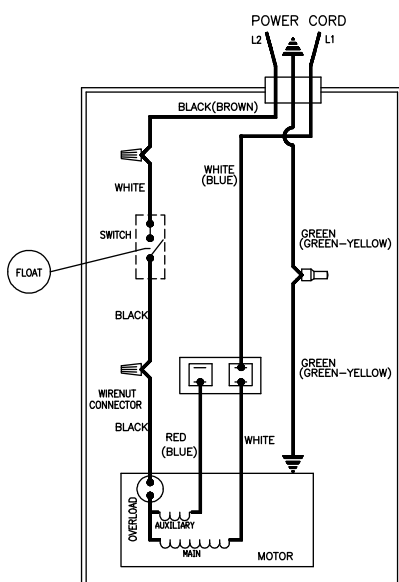

以下型号的配线图
"WB88, WD88, WM88, WU88"

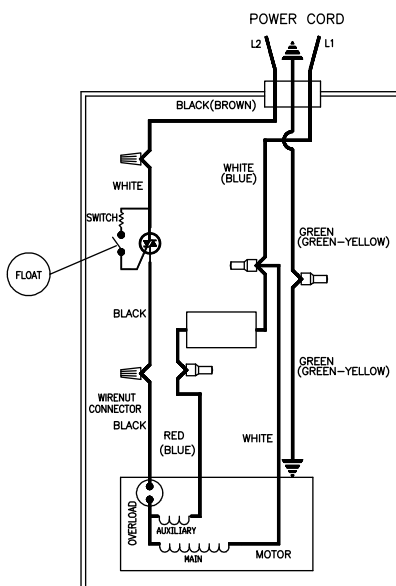

以下型号的配线图
"D88, M88, U88, BK88"

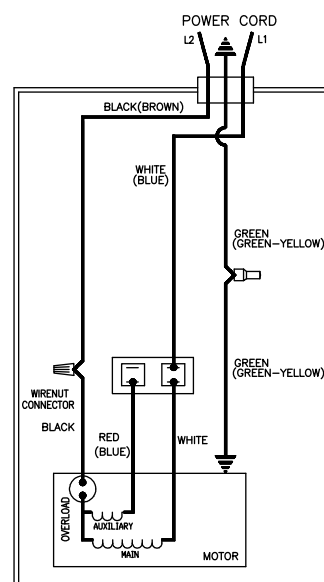

以下型号的配线图
"E88, N88, V88, BL88"

型号 WD88, WM88, WU88 的更换零件清单


				型号:	WD88	WM88	WU88
参考序号	说明	数量	备注	88-0021, A	88-0005, A	88-0013, C	88-0032, A
①	螺丝, M5X15L	4		080880	080880	080880	
②	电源线	1		N/A	N/A	N/A	
③	浮子组件	1		084355	084355	084355	
④	密封件, 0 型环 19x2	2		080238	080238	080238	
⑤	螺丝组件	1		084360	084360	084360	
⑥	螺丝, M6*1P*(15L或16L)	4		080893	080893	080893	
⑦	上盖	1	2, 3, 4	080162	080162	080162	
⑧	密封, 0 型环	1		080160	080160	080160	
⑨	电容器组件	1		084357	084359	086358	
⑩	马达 & 马达外壳	1		N/A	N/A	N/A	
⑪	密封, 油封 NBR/4*11.2*24/型式 B	1		080235	080235	080235	
⑫	密封组件	1		084093	084093	084093	
⑬	叶轮	1		080738	080738	081893	
⑭	水泵外壳	1		083412	083412	083412	
⑮	螺丝, M5X0.8PX15L	4		080894	080894	080894	
⑯	水泵底座	1		083415	083415	083415	
⑰	螺丝, M4X15L	8		080879	080879	080879	

备注

1. 请参阅不同型式及可用电源线长度的图表。有关细节, 请洽询工厂或授权经销商。
2. 更换此零件时, 我们建议也订购一个 0型环 ④
3. 更换此零件时, 我们建议也订购一个 螺丝组件 ⑤
4. 更换此零件时, 我们建议也订购一个 0型环 ⑧
5. "N/A" 表示不适用

电源线			
长度	插头规格	零件编号	项目编号
10'	NEMA 6-20 插头	081710	88-0021, A
		084348	88-0005, A
	无插头	084349	88-0032, A
15'	BS 1363A 插头	084350	88-0013, C

型号 WD88, WM88, WU88 的更换零件图解

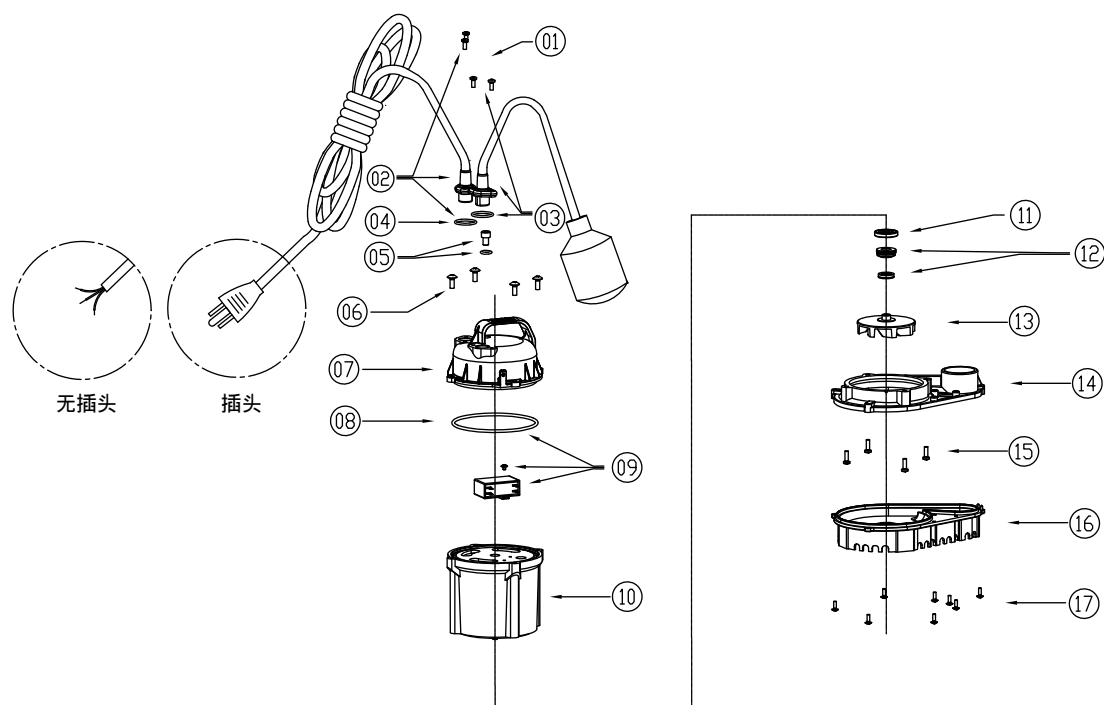

型号 D88, M88, U88 的更换零件清单


型号：				D88		M88	U88		
参考 序号	说明	数量	备注	88-0020, A	88-0035, A	88-0006, C 88-0011, B	88-0014, D 88-0039, A	88-0018, B 88-0037, A	88-0040, A
①	螺丝，M5X15L	2		080880	080880	080880	080880	080880	080880
②	电源线	1		N/A	N/A	N/A	N/A	N/A	N/A
③	螺丝，M4X15L	6		080879	080879	080879	080879	080879	080879
④	护盖，电线盒	1	2	080202	080202	080202	080202	080202	082981
⑤	密封，垫片 NBR	1		083115	083115	083115	083115	083115	083115
⑥	电路板	1	2	081232	081232	080780	081232	081232	081232
⑦	密封，O 型环 19x2	1		080238	080238	080238	080238	080238	080238
⑧	螺丝组件	1		084360	084360	084360	084360	084360	084360
⑨	螺丝，M6*1P*(15Lor16L)	4		080893	080893	080893	080893	080893	080893
⑩	上盖	1	2, 3, 4, 5	080201	080201	080201	080201	080201	082982
⑪	密封，O 型环	1		080160	080160	080160	080160	080160	080160
⑫	电容器组件	1		084357	084357	084359	084358	084357	084357
⑬	浮子组，垂直	1		084226	084226	084226	084226	084226	084226
⑭	马达 & 马达外壳	1		N/A	N/A	N/A	N/A	N/A	N/A
⑮	密封，油封 NBR/4*11.2*24/型式 B	1		080235	080235	080235	080235	080235	080235
⑯	密封组件	1		084093	084093	084093	084093	084093	084093
⑰	叶轮	1		080738	080738	080738	081893	081893	081893
⑱	水泵外壳	1		083413	082138	083413	083413	083413	083500
⑲	螺丝，M5X0.8PX15L	4		080894	080894	080894	080894	080894	080894
⑳	水泵底座	1		083416	083416	083416	083416	083416	083501
㉑	螺丝，M4X15L	8		080879	080879	080879	080879	080879	080879

备注

1. 请参阅不同型式及可用电源线长度的图表。有关细节，请洽询工厂或授权经销商。
2. 更换此零件时，我们建议也订购一个 O型环 ⑮
3. 更换此零件时，我们建议也订购一个 螺丝组件 ⑦
4. 更换此零件时，我们建议也订购一个 O型环 ⑧
5. 更换此零件时，我们建议也订购一个 O型环 ⑪
6. N/A” 表示不适用

电源线					
长度	插头规格	零件编号	项目编号		
10’	NEMA 5-15 插头	084348	88-0006, C	88-0011, B	
	NEMA 6-15 插头	081698	88-0020, A		
	GB1002-2008 插头	084352	88-0018, B	88-0037, A	
	BS 1363A 插头	084350	88-0014, D	88-0018, B	88-0039, A
15’	AS3112	084353	88-0040, A		

型号 D88, M88, U88 的更换零件图解

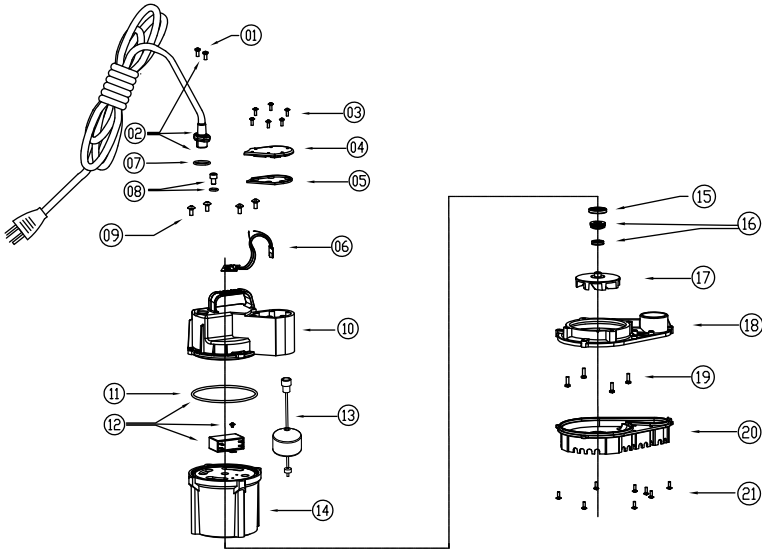

型号 E88, N88, V88 的更换零件清单


型号：				E88	N88	V88	
参考 序号	说明	数量	备注	88-0010, B 88-0022, B	88-0007, B 88-0023, B	88-0012, B	88-0017, A
①	螺丝，M5X15L	2		080880	080880	080880	080880
②	电源线	1		N/A	N/A	N/A	N/A
③	密封，O 型环 19x2	1		080238	080238	080238	080238
④	螺丝组件	1		084360	084360	084360	084360
⑤	螺丝，M6*1P*(15Lor16L)	4		080893	080893	080893	080893
⑥	上盖	1	2, 3, 4	080729	080729	080729	080729
⑦	密封，O 型环	1		080160	080160	080160	080160
⑧	电容器组件	1		084357	084359	084358	084357
⑨	马达 & 马达外壳	1		N/A	N/A	N/A	N/A
⑩	密封，油封 NBR/4*11.2*24/型式 B	1		080235	080235	080235	080235
⑪	密封组件	1		084093	084093	084093	084093
⑫	叶轮	1		080738	080738	081893	081893
⑬	水泵外壳	1		083412	083412	083412	083412
⑭	螺丝，M5X0.8PX15L	4		080894	080894	080894	080894
⑮	水泵底座	1		083415	083415	083415	083412
⑯	螺丝，M4X15L	8		080879	080879	080879	080879

备注

1. 请参阅不同型式及可用电源线长度的图表。有关细节, 请洽询工厂或授权经销商。
2. 更换此零件时, 我们建议也订购一个 O型环 ③
3. 更换此零件时, 我们建议也订购一个 螺丝组件 ④
4. 更换此零件时, 我们建议也订购一个 O型环 ⑦
5. N/A” 表示不适用

电源线				
长度	插头规格	零件编号	项目编号	
10'	NEMA 5-15 插头	084348	88-0007, B	88-0023, B
	无插头	084349	88-0010, B	
	NEMA 6-15 插头	084347	88-0022, B	
	GB1002-2008	084352	88-0017 B	
15'	BS 1363A	084350	88-0012, B	

型号 E88, N88, V88 的更换零件图解

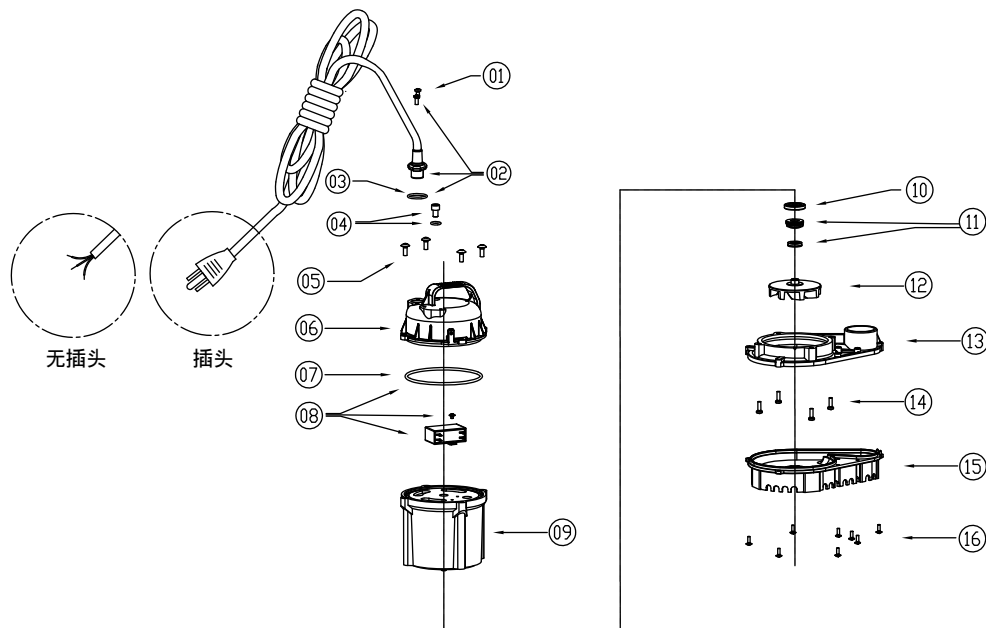

型号 WB88, WU88 的更换零件清单


型号：				WB88	WU88
参考序号	说明	数量	备注	88-0027, A	88-0024, A
01	螺丝, M5X15L	2		080880	080880
02	电源线	1		N/A	N/A
03	浮子组件	1		084356	084355
04	密封, O 型环 19x2	1		080238	080238
05	螺丝组件	1		084360	084360
06	螺丝, M6*1P*(15Lor16L)	4		080893	080893
07	上盖	1	2, 3, 4	080162	080162
08	密封, O 型环	1		080160	080160
09	电容器组件	1		084357	084357
10	马达 & 马达外壳	1		N/A	N/A
11	密封, 油封 NBR/4*11.2*24/型式 B	1		080235	080235
12	密封组件	1		084093	084093
13	叶轮	1		080738	081893
14	水泵外壳	1		082603	081070
15	螺丝, M5X0.8PX15L	4		080894	080894
16	螺丝, M12X1.75PX12L	4		080302	080302

备注

1. 请参阅不同型式及可用电源线长度的图表。有关细节, 请洽询工厂或授权经销商。
2. 更换此零件时, 我们建议也订购一个 O型环 04
3. 更换此零件时, 我们建议也订购一个 螺丝组件 05
4. 更换此零件时, 我们建议也订购一个 O型环 08
5. “N/A” 表示不适用

电源线			
长度	插头规格	零件编号	项目编号
10'	CEE 7-VII	084351	88-0027, A
	无插头	084349	88-0024, A

型号 WB88, WU88 的更换零件图解

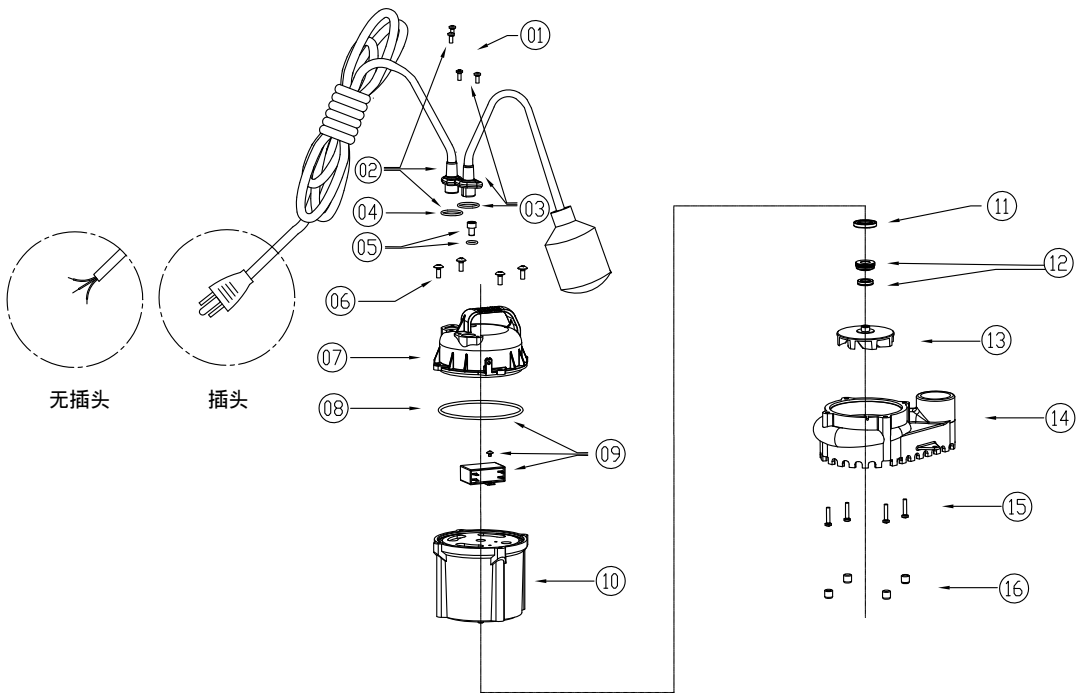

型号 D88, U88, BK88 的更换零件清单


型号:				D88			U88			BK88
参考序号	说明	数量	备注	88-0031, D	88-0035, D	88-0038, D	88-0026, D	88-0034, A	88-0041, A	88-0028, A
01	螺丝, M5X15L	2		080880	080880	080880	080880	080880	080880	080880
02	电源线	1		N/A	N/A	N/A	N/A	N/A	N/A	N/A
03	螺丝, M4X15L	6		080879	080879	080879	080879	080879	080879	080879
04	护盖, 电线盒	1	2	080202	080202	080202	080202	080202	080202	080202
05	密封, 垫片 NBR	1		083115	083115	083115	083115	083115	083115	083115
06	电路板	1	2	081232	081232	081232	081232	081232	081232	081232
07	密封, O 型环 19x2	1		080238	080238	080238	080238	080238	080238	080238
08	螺丝组件	1		084360	084360	084360	084360	084360	084360	084360
09	螺丝, M6*1P*(15Lor16L)	4		080893	080893	080893	080893	080893	080893	080893
10	上盖	1	2, 3, 4, 5	080201	080201	080201	080201	080201	080201	080201
11	密封, O 型环	1		080160	080160	080160	080160	080160	080160	080160
12	电容器组件	1		084357	084357	084357	084357	084357	084357	084357
13	浮子组, 垂直	1		084226	084226	084226	084226	084226	084226	084226
14	马达 & 马达外壳	1		N/A	N/A	N/A	N/A	N/A	N/A	N/A
15	密封, 油封 NBR/4*11.2*24/型式 B	1		080235	080235	080235	080235	080235	080235	080235
16	密封组件	1		084093	084093	084093	084093	084093	084093	084093
17	叶轮	1		080738	080738	080738	081893	081903	081893	080738
18	水泵外壳	1		081069	082138	081069	081069	082138	082136	082606
19	螺丝, M5X0.8PX15L	4		080894	080894	080894	080894	080894	080894	080894
20	螺丝, M12X1.75PX12L	4		080302	080302	080302	080302	080302	080302	080302

备注

1. 请参阅不同型式及可用电源线长度的图表。有关细节, 请洽询工厂或授权经销商。
2. 更换此零件时, 我们建议也订购一个 O型环 05
3. 更换此零件时, 我们建议也订购一个 螺丝组件 07
4. 更换此零件时, 我们建议也订购一个 O型环 08
5. 更换此零件时, 我们建议也订购一个 O型环 11
6. “N/A” 表示不适用

电源线					
长度	插头规格	零件编号	项目编号		
10'	无插头	084349	88-0026, A	88-0031, A	88-0034, A
	NEMA 5-15 插头	084354	88-0038, A		
	CEE 7-VII	084351	88-0028, A		
	NEMA 6-20 插头	084347	88-0035 A		
	GB1002-2008 插头	084352	88-0041, A		

型号 D88, U88, BK88 的更换零件图解

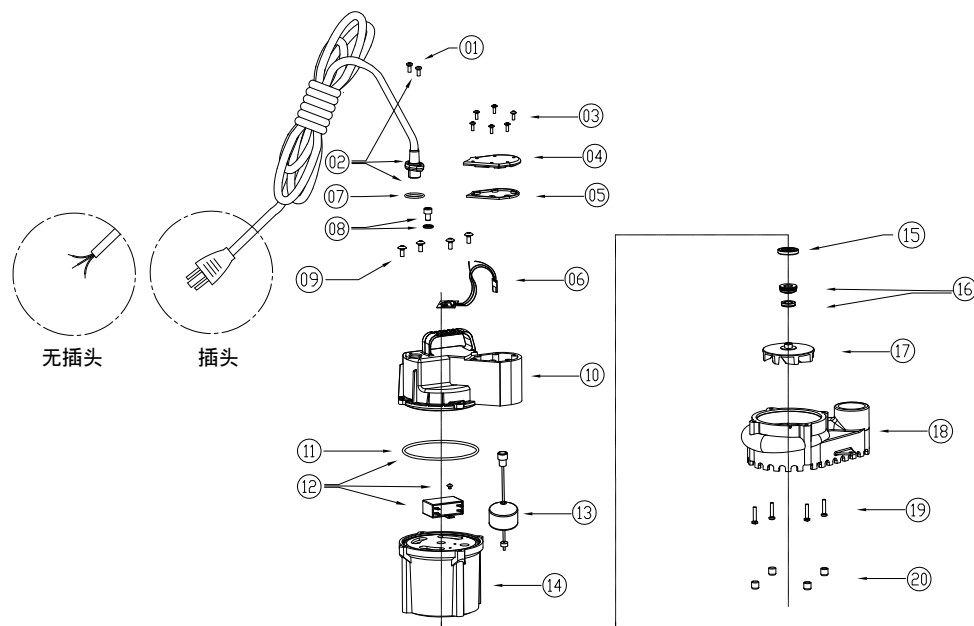

型号 E88, V88, BL88 的更换零件清单

			型号：	E88	V88		BL88
参考 序号	说明	数量	备注	88-0009, B	88-0025, A	88-0033, A	88-0029, A
01	螺丝，M5X15L	2		080880	080880	080880	080880
02	电源线	1		N/A	N/A	N/A	N/A
03	密封，O 型环 19x2	1		080238	080238	080238	080238
04	螺丝组件	1		084360	084360	084360	084360
05	螺丝，M6*1P*(15Lor16L)	4		080893	080893	080893	080893
06	上盖	1	2, 3, 4	080729	080729	080729	080729
07	密封，O 型环	1		080160	080160	080160	080160
08	电容器组件	1		084357	084357	084357	084357
09	马达 & 马达外壳	1		N/A	N/A	N/A	N/A
10	密封，油封 NBR/4*11.2*24/型式 B	1		080235	080235	080235	080235
11	密封组件	1		084093	084093	084093	084093
12	叶轮	1		080738	081893	081893	080738
13	水泵外壳	1		082871	081070	082137	082603
14	螺丝，M5X0.8PX15L	4		080894	080894	080894	080894
15	螺丝，M12X1.75PX12L	4		080302	080302	080302	080302

备注

- 1. 请参阅不同型式及可用电源线长度的图表。有关细节，请洽询工厂或授权经销商。
- 2. 更换此零件时，我们建议也订购一个 O型环 03
- 3. 更换此零件时，我们建议也订购一个 螺丝组件 04
- 4. 更换此零件时，我们建议也订购一个 O型环 07
- 5. N/A” 表示不适用

电源线					
长度	插头规格	零件编号	项目编号		
10’	无插头	084349	88-0009, A	88-0025, A	88-0033, A
	CEE 7-VII	084351	88-0029, A		

型号 E88, V88, BL88 的更换零件图解

